 


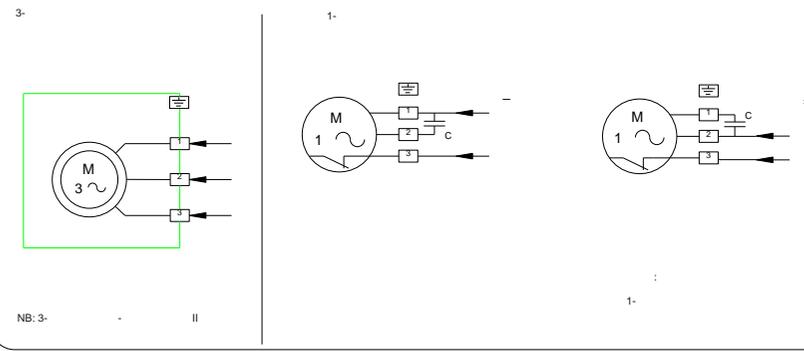


- 1) ()
- 2) ()

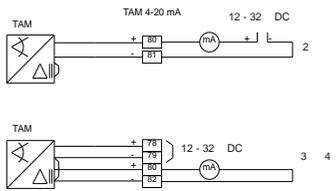


(98 99)
 1, 2, 3 ()

| | |
|----------------|------|
| TRI 460V-60Hz | 115V |
| TRI 400V-50Hz | 230V |
| Mono 230V-50Hz | 230V |
| Mono 115V-60Hz | 115V |

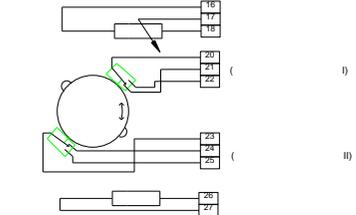


NB: 3- II

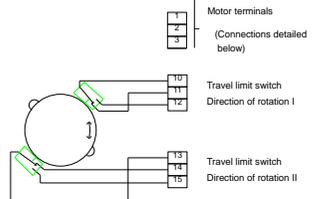

FUNCTION OF SWITCHES
 Direction of rotation
 I) anticlockwise (normally opening)
 II) Clockwise (Normally closing)

 Direction of rotation seen on opposite side of fixing flange of actuator





SOLENOID OPERATED BRAKE

CONNECTION INSTRUCTIONS

- Do not connect the solenoid operated brake (terminals 98 & 99).
- Connect terminals 1,2,3 to give supply to the motor and check the rotation direction.
- Connect the travel limit switches and check its function.
- Now connect the solenoid operated brake if all other operations have been given satisfactory.

| | Solenoid Operated Brake |
|---------------|-------------------------|
| 3Ph 460V-60Hz | 115V |
| | 230V |
| | 230V |
| | 115V |




OPTIONAL ACCESSORIES

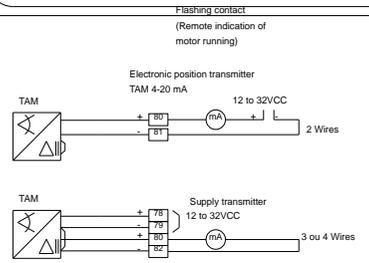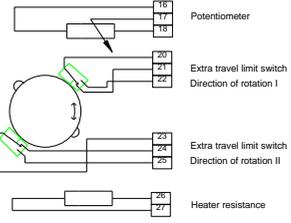

MOTOR

THREE PHASE

SINGLE PHASE

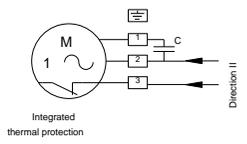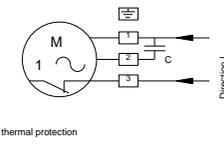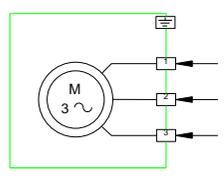

NOTA: 3Ph phase direct=DirectionII

| | | | | | | |
|------|----------|----------------|----------|------------------------------------|-----------|--|
| | | | | | S30000/00 | |
| B | 18/02/03 | PAYET | SCHWEBEL | GAM | T320 | |
| A | 08/03/02 | PAYET | SCHWEBEL | GAM | CREATION | |
| REV. | DATE | AUTEUR | VERIF. | APPROUV. | MODIF. | |
| | | BERNARD | | 4, rue d'Arsonval 95505 GONESSE | | TEL.(0)1.34.07.71.00 FAX.(0)1.34.07.71.01 |

FQ

| | | | | | | |
|------|----------|----------------|----------|-----------------------------------|-------------------|--|
| | | | | | TITLE : S30000/00 | |
| B | 18/02/03 | PAYET | SCHWEBEL | GAM | T320 | |
| A | 08/03/02 | PAYET | SCHWEBEL | GAM | CREATION | |
| REV. | DATE | AUTEUR | VERIF. | APPROUV. | MODIF. | |
| | | BERNARD | | 4 rue d'Arsonval 95505 GONESSE | | TEL.(0)1.37.07.71.00 FAX.(0)1.34.07.71.01 |

INTERNAL WIRING DIAGRAM

FQ ACTUATOR